

Build Care Oy
Äyritie 18
FI 01510 VANTAA
Finland

Determination of radon transmittance

(2 appendices)

Work requested

RISE was requested to measure the radon transmittance through an elastic sheet material in accordance with SP Method no. 3873.

The material sample

The client delivered their product which was named ElaProof H to RISE Research Institute of Sweden on 2017-10-02. There were no signs of visible damage to the material on arrival. The material thickness was 0.8-1.2 mm, given by the client. The material was tested without joints. See Appendix 2 for a picture of the material.

Method of testing

Radon transmittance was tested in accordance with SP Method no. 3873. The material was mounted between two stainless steel boxes, the lower of which (the source box) contained a radon source. The perimeter was sealed very carefully, in order to ensure gas-tight joints between the boxes and the material, and also between the boxes themselves. The radon concentrations on each side of the test material was measured using an Atmos 33 instrument.

Results

Material	Thickness d , m	Radon transmittance P , m/s	Radon resistance Z , s/m
ElaProof H	0.0008 - 0.0012	$1.2 \cdot 10^{-8}$	$8.5 \cdot 10^7$

Note that the test results shown above apply only to the particular sample of material that was tested. Detailed results, including uncertainty of measurement, are given in Appendix 1.

RISE Research Institutes of Sweden AB

Postal address	Office location	Phone / Fax / E-mail
Box 857	Brinellgatan 4	+46 10 516 50 00
SE-501 15 BORÅS	SE-504 62 BORÅS	+46 33 13 55 02
Sweden		info@ri.se

This report may not be reproduced other than in full, except with the prior written approval of the issuing laboratory.

RISE Research Institutes of Sweden AB
Building Technology - Building Physics and Indoor Environment

Performed by

Examined by



Signed by: Azar Neisari Tabrizi
Reason: I am the author of this document
Date & Time: 2017-10-11 15:44:56 +02:00

Azar Neisari Tabrizi



Signed by: Eva-Lotta Kurkinen
Reason: I have reviewed this document
Date & Time: 2017-10-11 16:00:52 +02:00

Eva-Lotta Kurkinen

Appendices

Test results

Photographs of the tested material

Appendix 1

Test results

Client	Build Care Oy
Sample for testing	ElaProof H
Date of testing	2017-10-02 – 2017-10-09
Test data	Free volume, source box, V_1 : 0.027 m ³ Free volume receiver box, V_2 : 0.026 m ³ Total free volume, V : 0.053 m ³
Equipment	Atmos 33 (SP no. 202266) for measurement of Polonium-218 concentration. Most recently calibrated 2017-03-17, by Swedish Radiation Safety Authority
Radon source	Lightweight concrete emitting Radium Rn-222, with Po-218 as the first decay product.
Ambient temperature	23 ± 3 °C
Ambient RH	50 ± 10 %
Uncertainty of measurement	The increased uncertainty of measurement was estimated as ± 21 %, including a coverage factor of $k = 2$. Uncertainty of measurement for temperature was ± 2 °C, and that for relative humidity was ± 5 % in the test chamber.
Observation	No changes in the test material were observed during the tests.
Miscellaneous	The test results given in this report relate only to the particular samples of material that were tested.

The following results have been calculated under the conditions as shown in the table below:

Material, name	ElaProof H
Exposed area of test material A , m ²	0.25
Thickness of test material d , m	0.0008 - 0.0012
Radon concentration at start C_0 , Bq/m	17
Radon exhalation Φ , Bq/s	$3.2 \cdot 10^{-3}$
Effective radon sink λ_1 , s ⁻¹	$4.2 \cdot 10^{-6}$
Radon transmittance P , m/s	$1.2 \cdot 10^{-8}$
Radon resistance Z , s/m	$8.5 \cdot 10^7$

Theory

Emission of radon from the radon source results in an increase of radon concentration in the source box, leading to a difference in concentration between the source box and the receiver

Appendix 1

box. This difference causes a flow of radon by diffusion through the test material. Only radon gas (Rn) passes through, and not its decay products (RnD). Radon transmittance is measured by measuring the change in radon concentration on both sides of the test material. Figures 1 and 2 show how the radon concentrations build up in the two boxes.

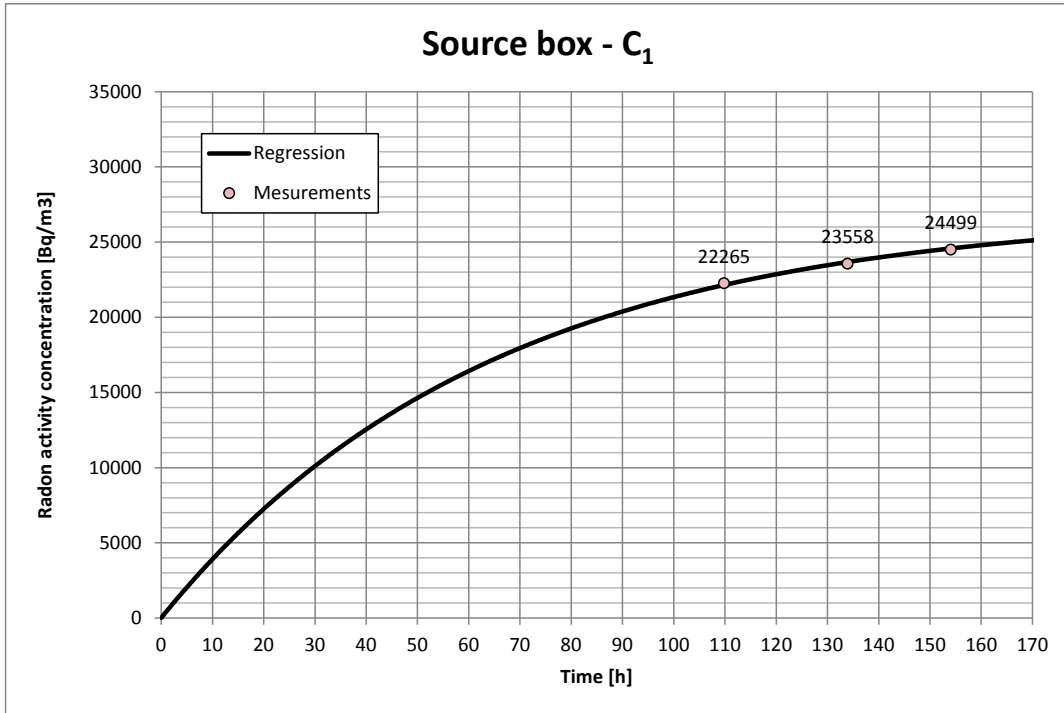


Figure 1 Radon concentration in the primary box: measured daily average values and the regression curve.

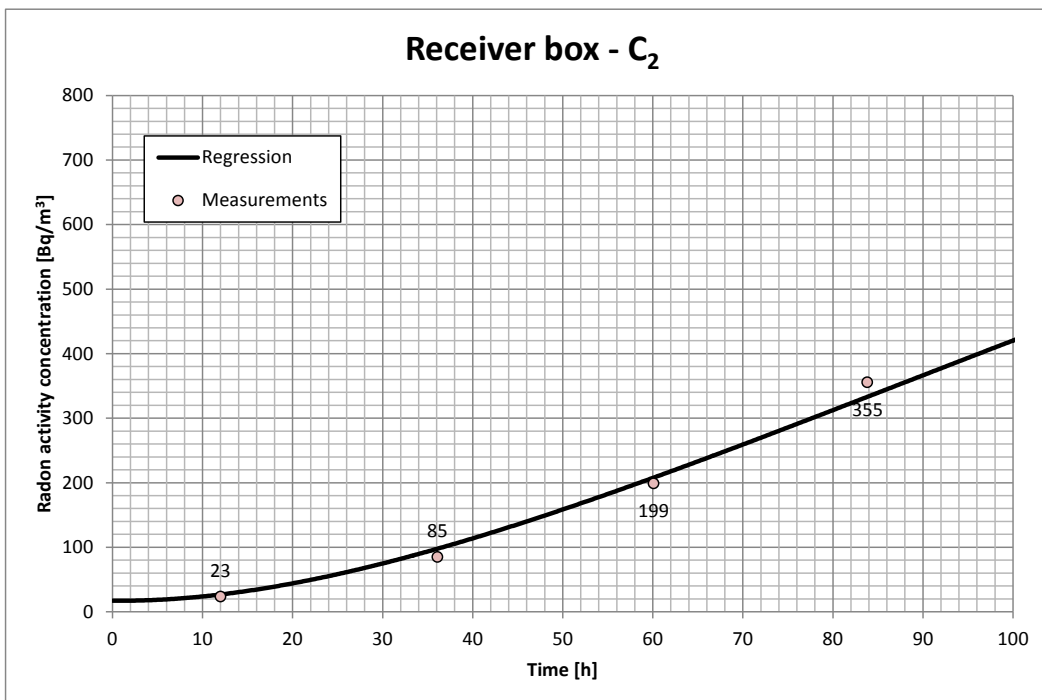


Figure 2 Radon concentration in the secondary box: measured daily average values and the regression curve.

Appendix 2

Photographs of the tested material